



Scorch 7 Mode Rapid Fire Installation Guide

This guide will show you how to install the Scorch 7 Mode Rapid Fire Chip into your Xbox 360 Wireless controller.

- 1. First step is to remove your battery pack and the seven screws as shown in the picture.*




- 2. Next you will lay the Scorch Flexboard onto your controller as shown in picture.*



3. Next you will put your controller face down while holding the controller in your hand. While pushing up on the thumbsticks to separate the controller in half.
4. You will then tape down your flexboard with standard clear tape.
5. Once you have completed that you will then see the type of controller you have either CG or Matrix. As Shown in the picture below the Scorch Logo.



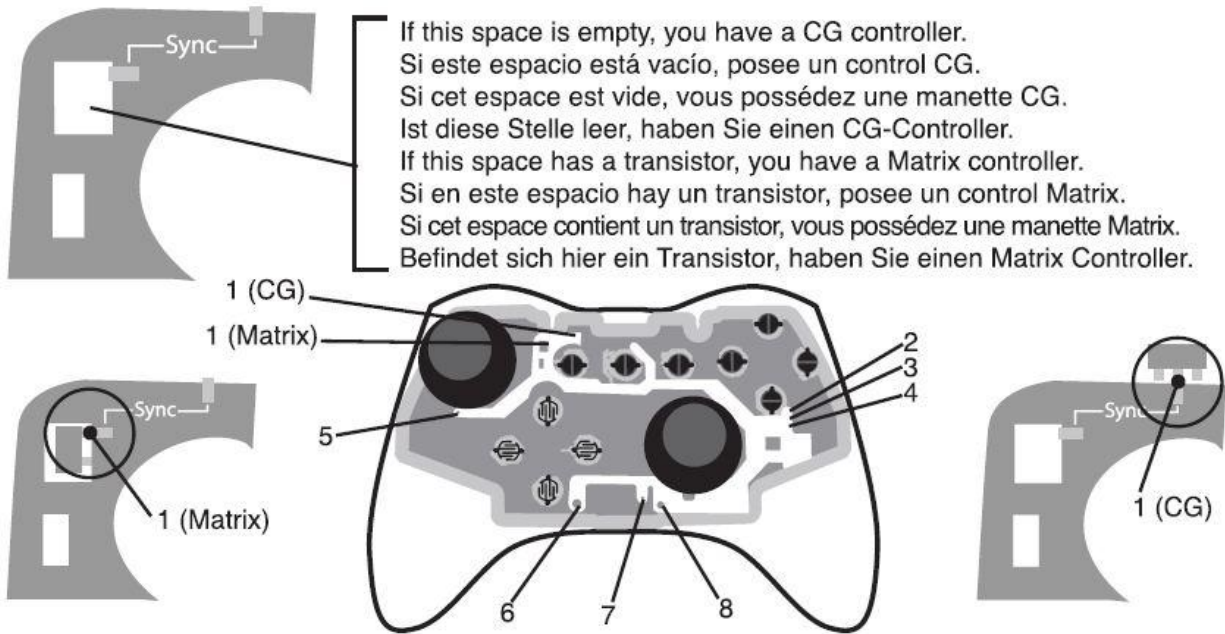

6. **Connect the points in order as shown in the above picture by soldering each point into place. Remember the CG controllers use the Top Sync connection and the Matrix use the Left**
7. **Next you will remove the clear tape you placed on the Scorch Flexboard. (Be very gentle in pulling the tape off. Taking care not to pull the Scorch Flexboard up.**
8. **Repeat steps 1-3 to in Reverse order to put your Xbox 360 Controller back together.**
9. **Enjoy your Scorch infused Xbox 360 Controller. Got Modz ?**

Link to the Scorch Rapid Fire Kit

http://www.modjunkiez.com/Scorch-7-Mode-Adjustable-Rapid-Fire-Kit-for-Xbox-360-Controllers_p_574.html

Scorch Rapid Fire Operational guide:

<https://modjunkiez.com/assets/images/PDFGuides/7MODEADJUSTABLEGuide.PDF>